

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves

Infinity Remote Android App Operating Instructions




INFINITY

Introduction

This document will guide you through the process required to connect your Wi-fi enabled Infinity Fire to your home network so that you can control it using the Infinity Remote app on your smartphone.

Requirements:


An android device capable running Android Ver. 4.4.4 (KitKat) - API level 19 (2013) or newer.

Index

- 1) [Starting the App](#)
- 2) [App Display](#)
- 3) [Starting the fire](#)
- 4) [Flame mode \(manual\)](#)
- 5) [Thermostatic mode](#)
- 6) [ECO mode](#)
- 7) [Stopping the fire](#)
- 8) [Disconnect Wi-Fi](#)
- 9) [Version Info, Wi-Fi Reset and Links](#)
- 10) [Direct Connection](#)

Starting The App



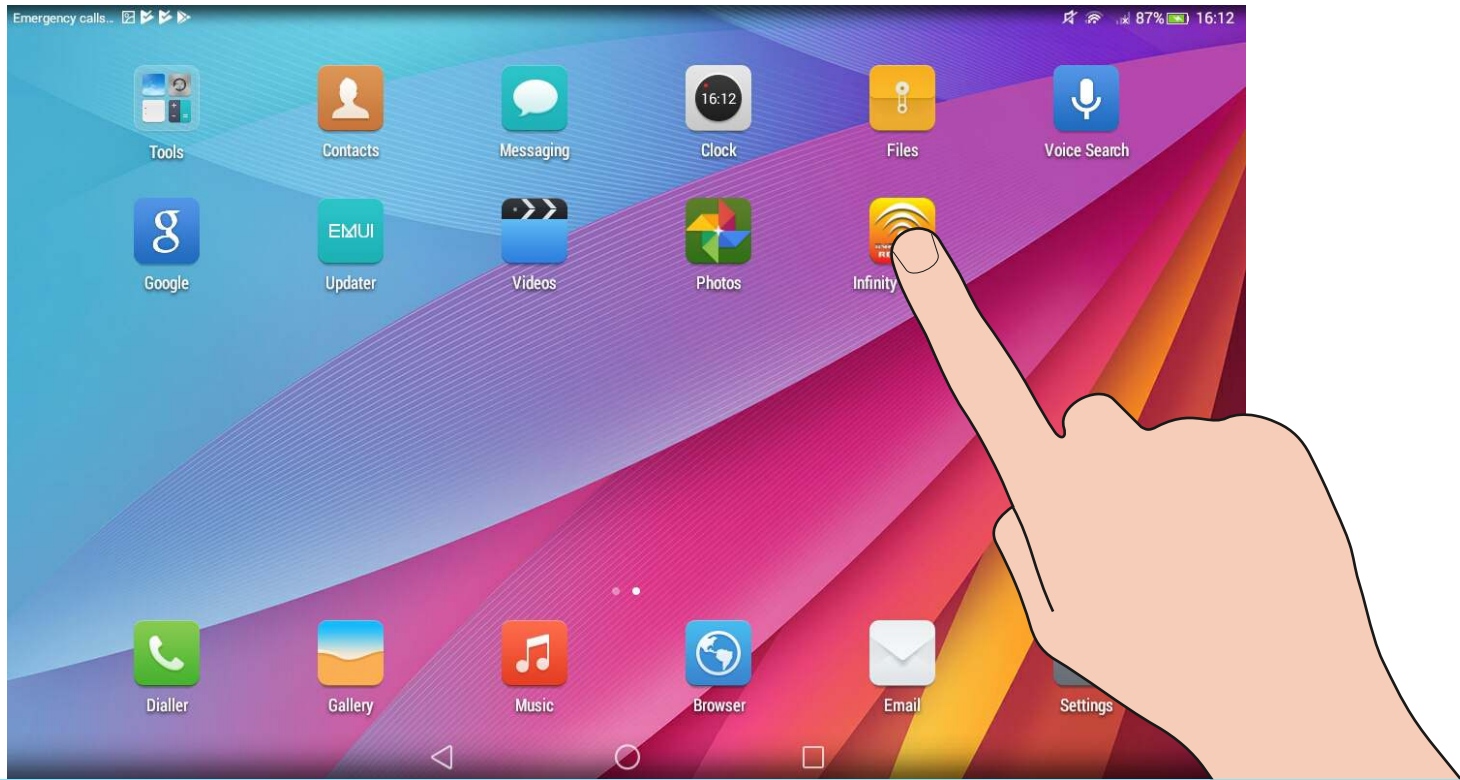

Start the App by tapping the icon.

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves




INFINITY

Splash Screen
(Displayed for a few seconds)

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves



Tap to connect

Teddington
192.168.254.88
Lounge 192.168.254.87

- Charlton & Jenrick
- Add a new fire
- Lounge



Your Infinity Fire is now setup on your home network and ready to connect to your smartphone. If the App does not automatically go to the control screen select your fire from the list.

App. Display



Current Mode /
Flame Condition

Disconnect
From Fire

Links and Version
Information



Mode Selection

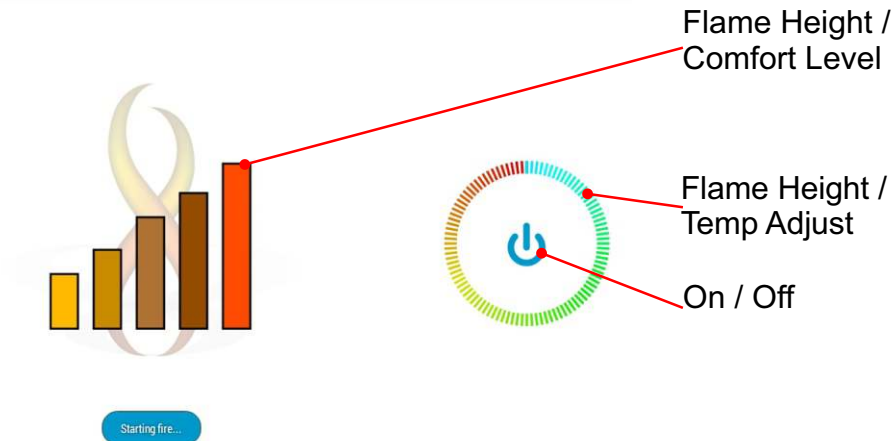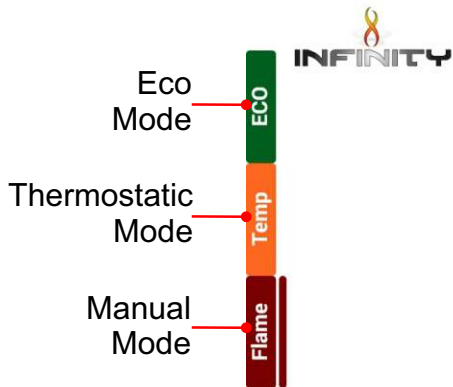

Find us on Facebook

<http://www.charltonandjenrick.co.uk>


@c.jfires Follow us on twitter




Starting The Fire




For safety reasons there is a three stage process to start the fire as shown in the next three illustrations.

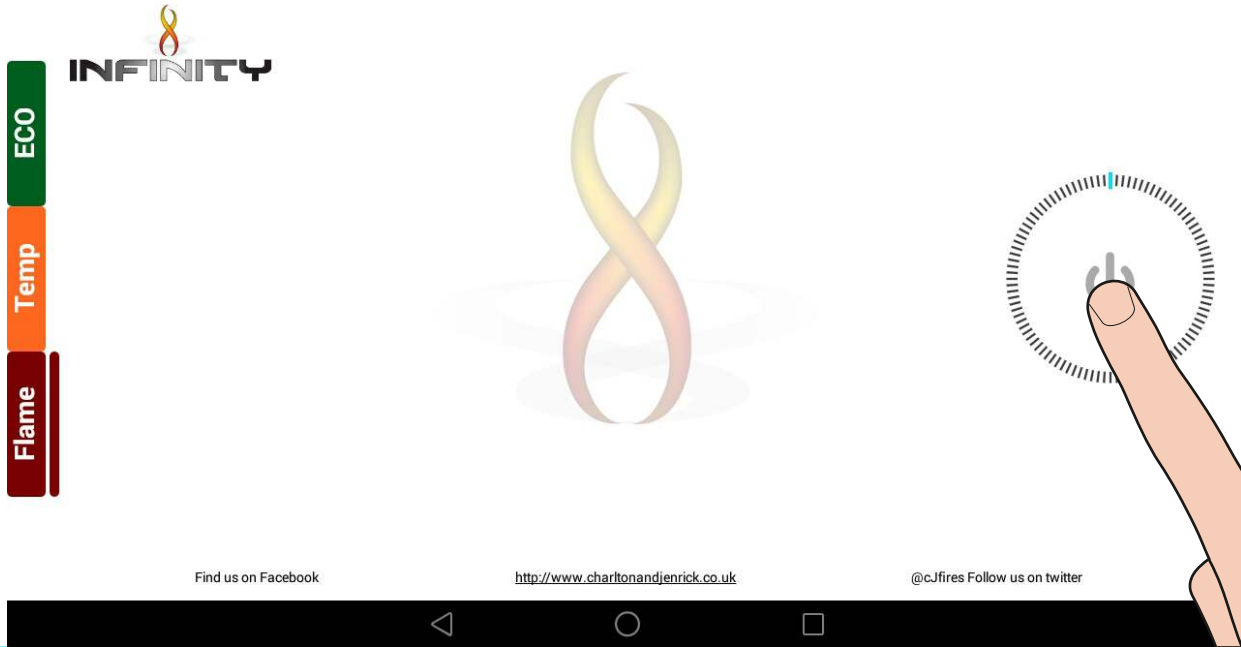

First press the power symbol  in the centre of the dial.

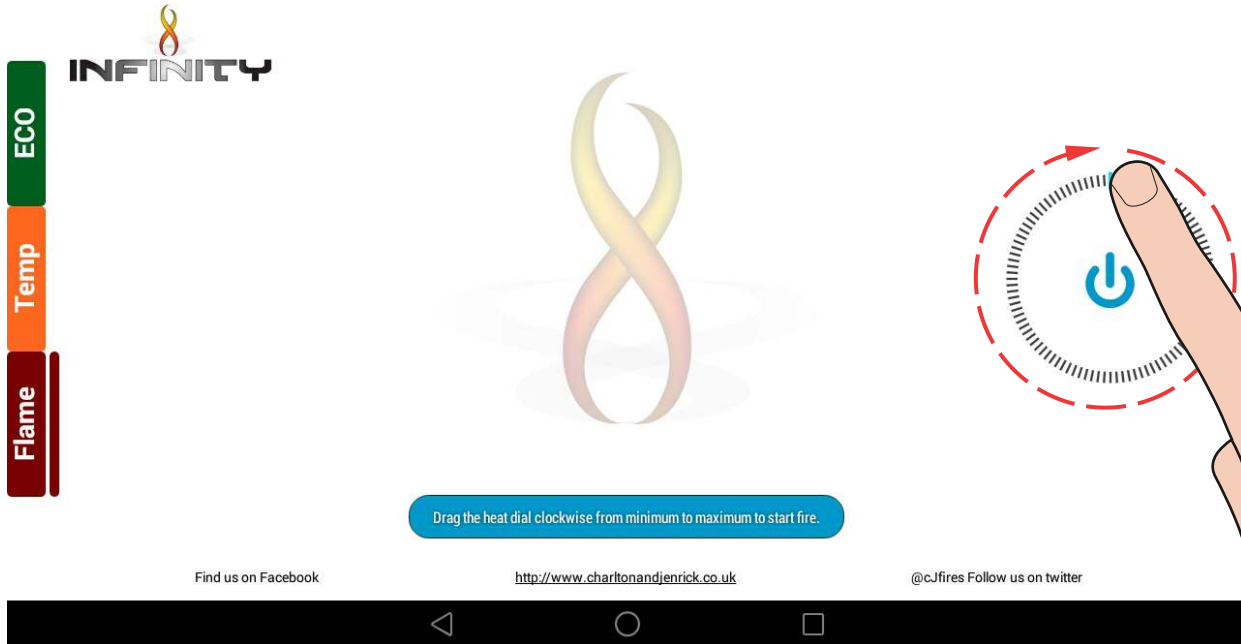

Secondly drag the heat dial clockwise from minimum to maximum.

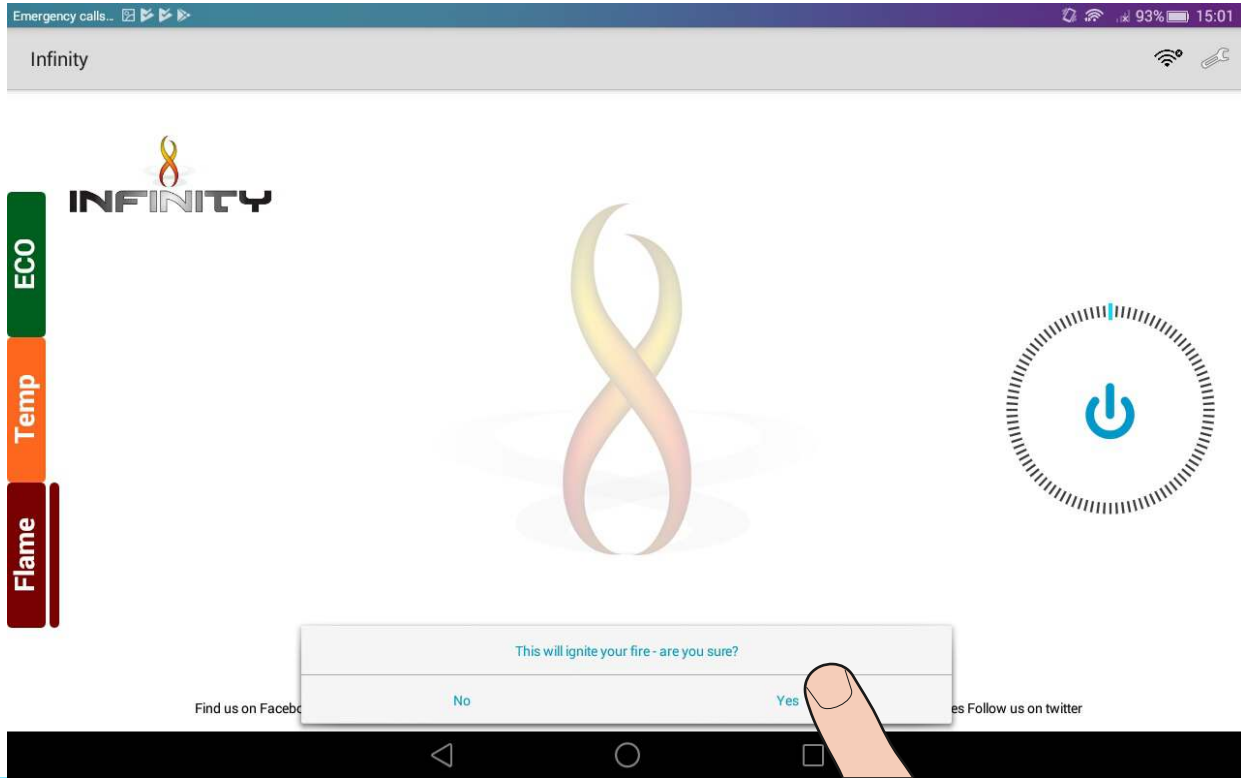

Finally select **Yes** and the fire will start the ignition process.

INFINITY

ECO

Temp

Flame


Starting fire...

Find us on Facebook

<http://www.charltonandjenrick.co.uk>

@cJfires Follow us on twitter

The fire will take a few seconds to start.

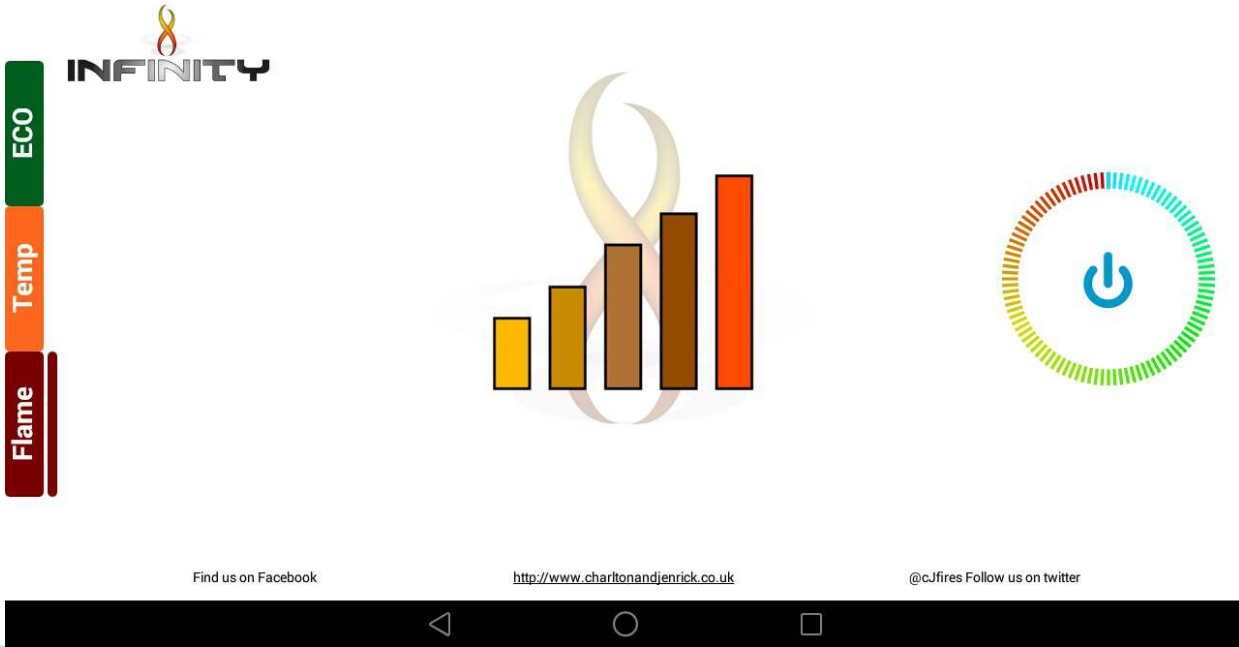


Once the fire has lit it needs time to warm up. Condensation may form on the glass until it has warmed up.
You can now adjust the flame height or change modes.

Flame Mode (manual)



FLAME

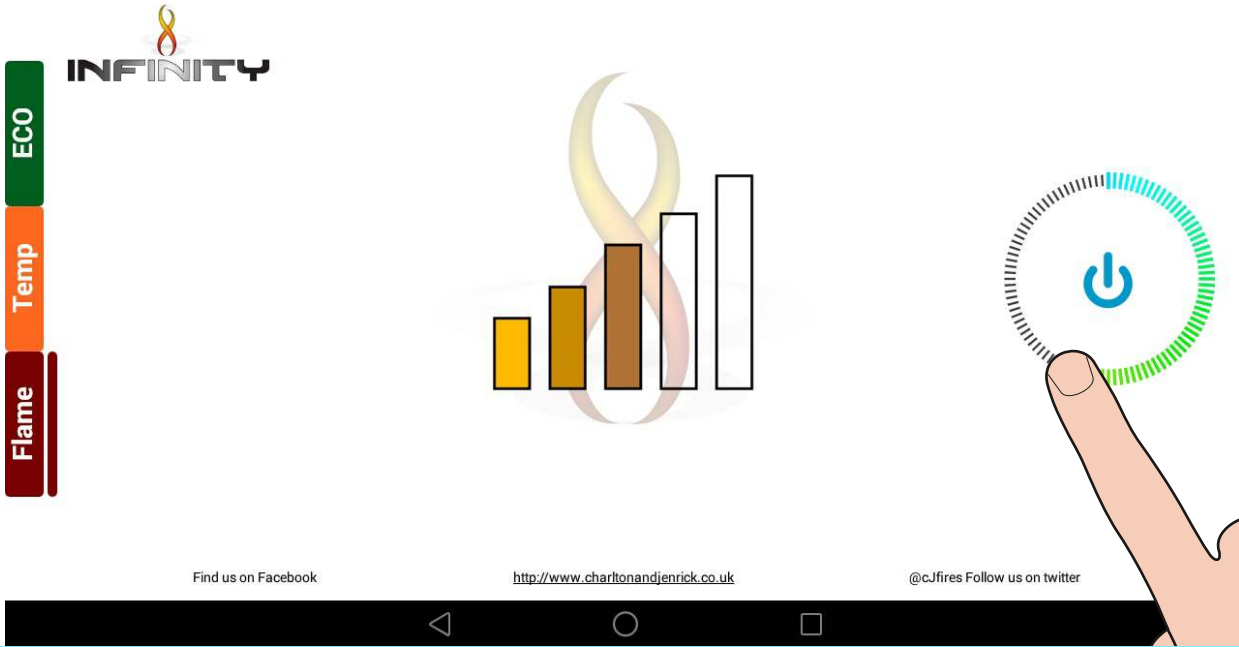


You can now adjust the flame height using the dial.
Drag the dial until the desired flame height is achieved.

Thermostatic Mode



TEMP

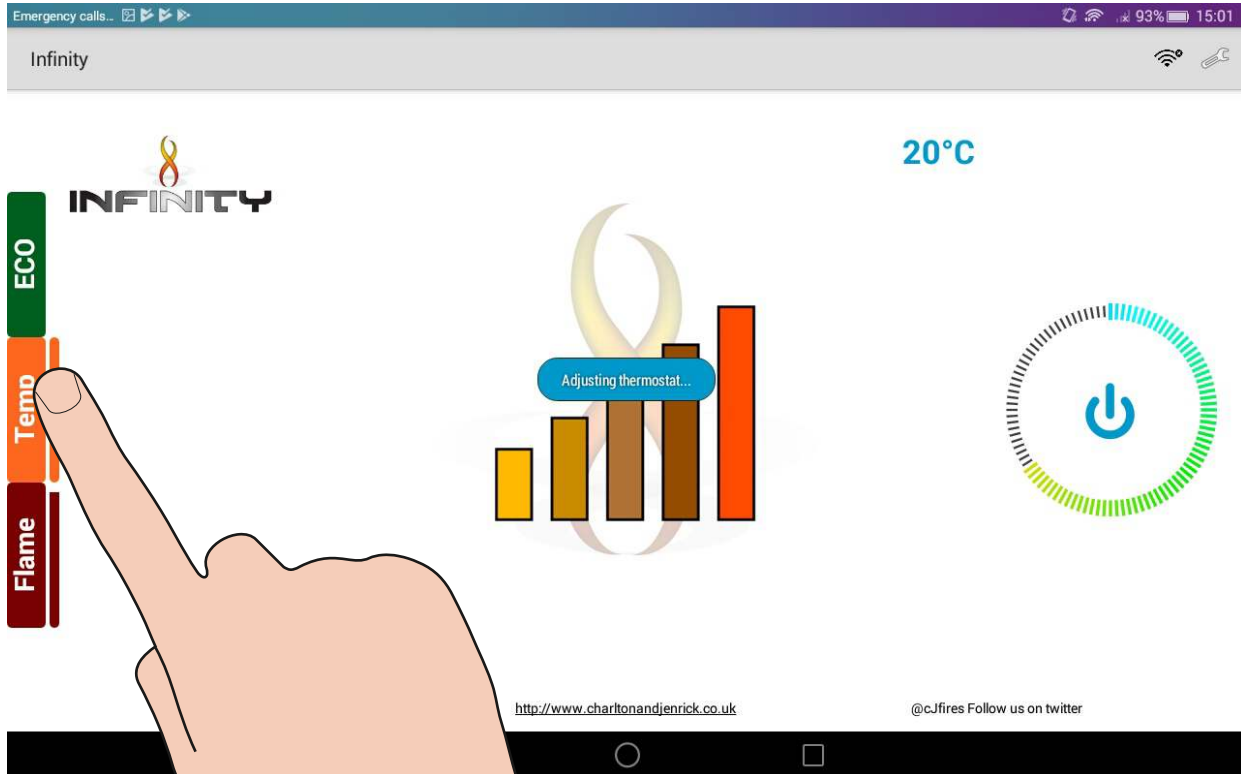

Select **Temp** mode by tapping the **Temp** tab on the lefthand side of the display.

Infinity

INFINITY

ECO

Temp

Flame

20°C



Find us on Facebook <http://www.charltonandjenrick.co.uk> @cJfires Follow us on twitter

The app is now in Temp mode.



Now drag the dial around to set the desired temperature (shown in the middle of the screen). Then lift your finger.

Lounge



22°C

ECO

Temp

Flame



 
Adjusting thermostat...




Find us on Facebook <http://www.charltonandjenrick.co.uk> @cJfires Follow us on twitter

The flame height will now be automatically adjusted up and down to maintain the target temperature.

ECO Mode



ECO

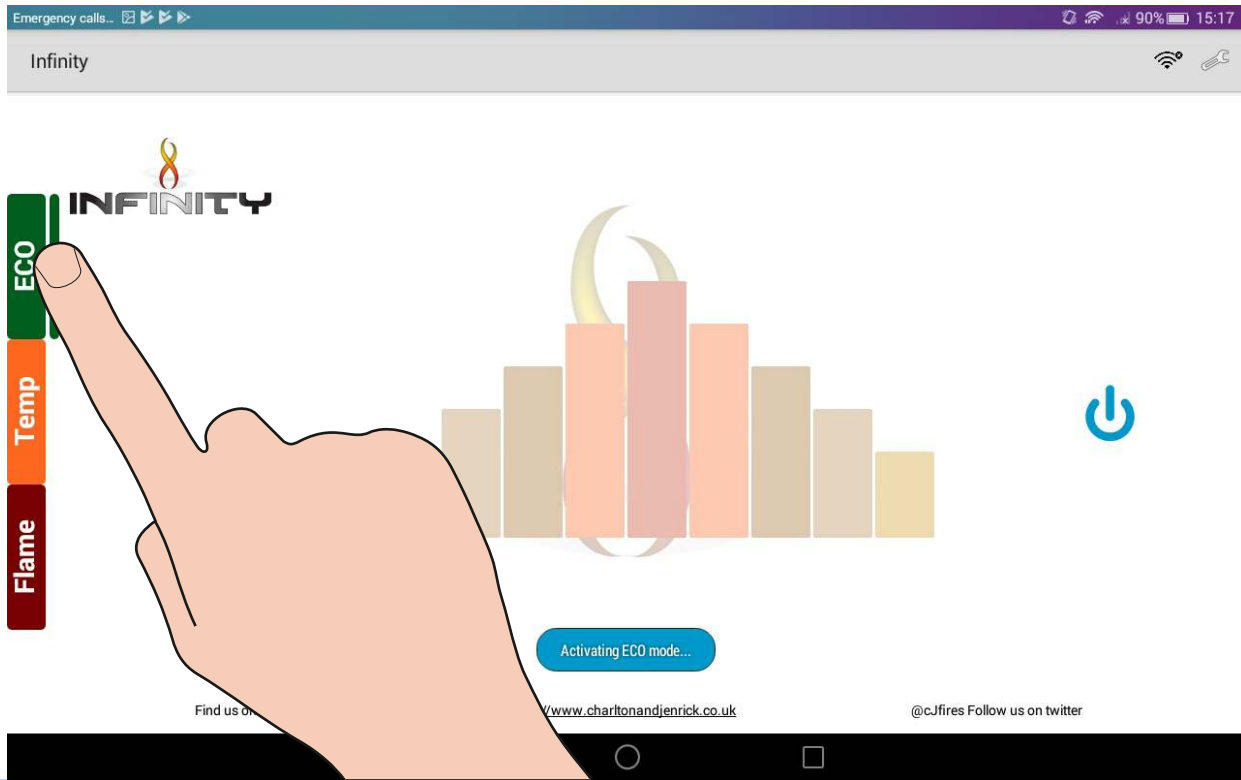


Select **ECO** mode by touching the **ECO** tab on the lefthand side of the display.

The screenshot displays the INFINITY control interface. At the top, the status bar shows 'Emergency calls...', signal strength, Wi-Fi, 90% battery, and the time 15:17. Below this is a grey header with the word 'Infinity' and icons for Wi-Fi and settings. The main interface features the INFINITY logo with a flame icon. On the left, there is a vertical stack of three buttons: 'ECO' (green), 'Temp' (orange), and 'Flame' (dark red). The central part of the screen shows a bar chart with ten bars of varying heights, colored in shades of yellow, orange, and red. A large blue power button icon is positioned to the right of the chart. At the bottom, there are three social media links: 'Find us on Facebook', '<http://www.charltonandjenrick.co.uk>', and '@cJfires Follow us on twitter'. The bottom of the screen shows the Android navigation bar with back, home, and recent apps buttons.

In **ECO** mode the flame height will automatically be adjusted up and down.

Stopping The Fire



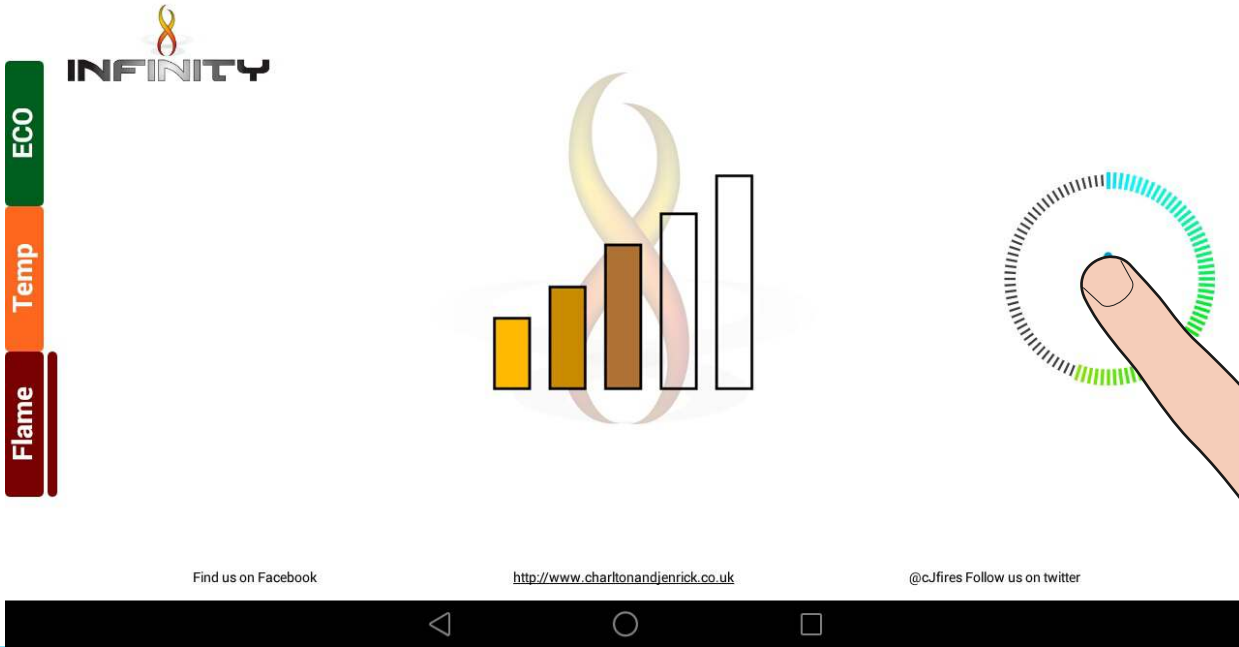

To stop the fire first tap the Power Button symbol



The interface features a vertical sidebar on the left with three buttons: 'ECO' (green), 'Temp' (orange), and 'Flame' (red). The main area contains a bar chart with five bars of increasing height, a large blue power button icon, and a confirmation dialog box. The dialog box asks 'Would you like to stop the fire?' and has 'No' and 'Yes' options. A hand is shown tapping the 'Yes' button.

INFINITY

ECO

Temp

Flame

Would you like to stop the fire?

No Yes

Find us on Facebook Follow us on twitter

Secondly select **Yes** to confirm.

Lounge

INFINITY


ECO
Temp
Flame


Find us on Facebook <http://www.charltonandjenrick.co.uk> @cJfires Follow us on twitter

The fire has now been stopped.

Disconnecting The App From The Fire



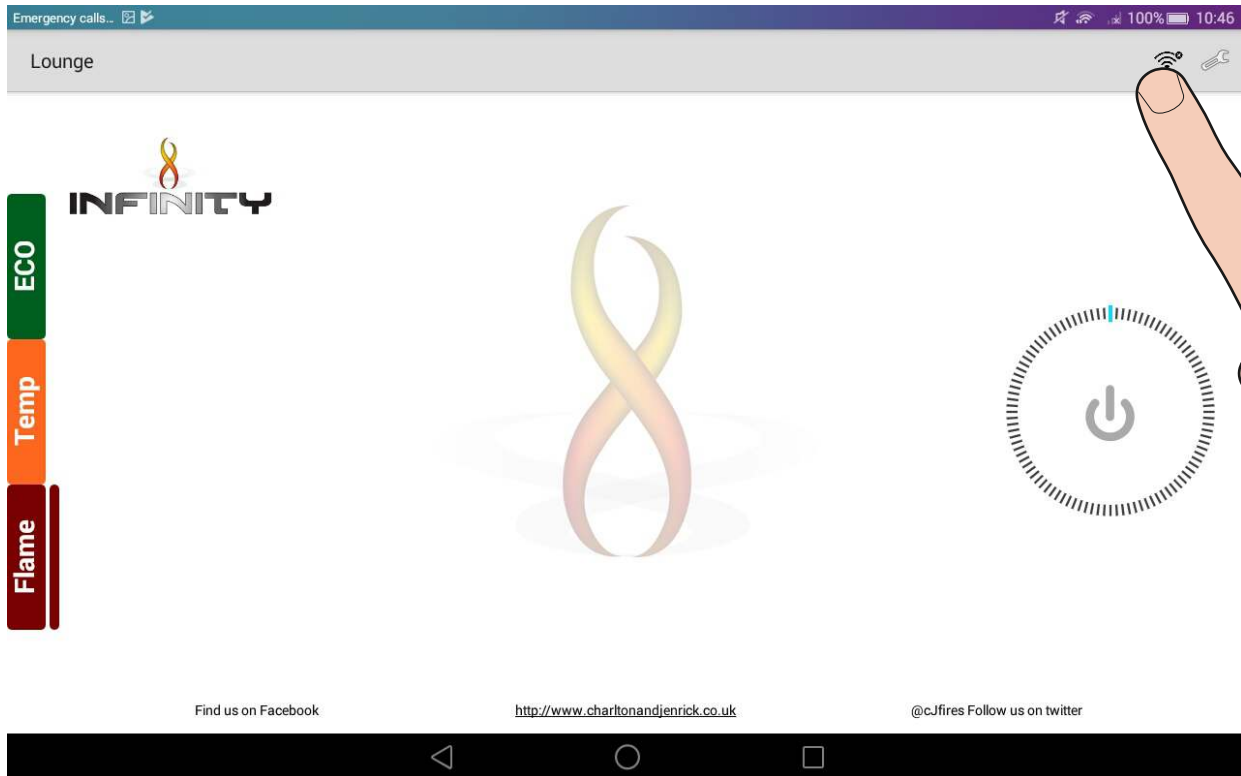

To disconnect the app from the fire tap the Wi-Fi disconnect icon  at the top of the screen.

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves



Tap to connect

Teddington
192.168.254.88
Lounge 192.168.254.87


Charlton & Jenrick


Add a new fire


Lounge

The app is no longer connected to the fire. You can reconnect to the fire at anytime by selecting it from the list.

Version Info, Reset Wi-Fi And Links

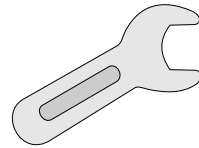

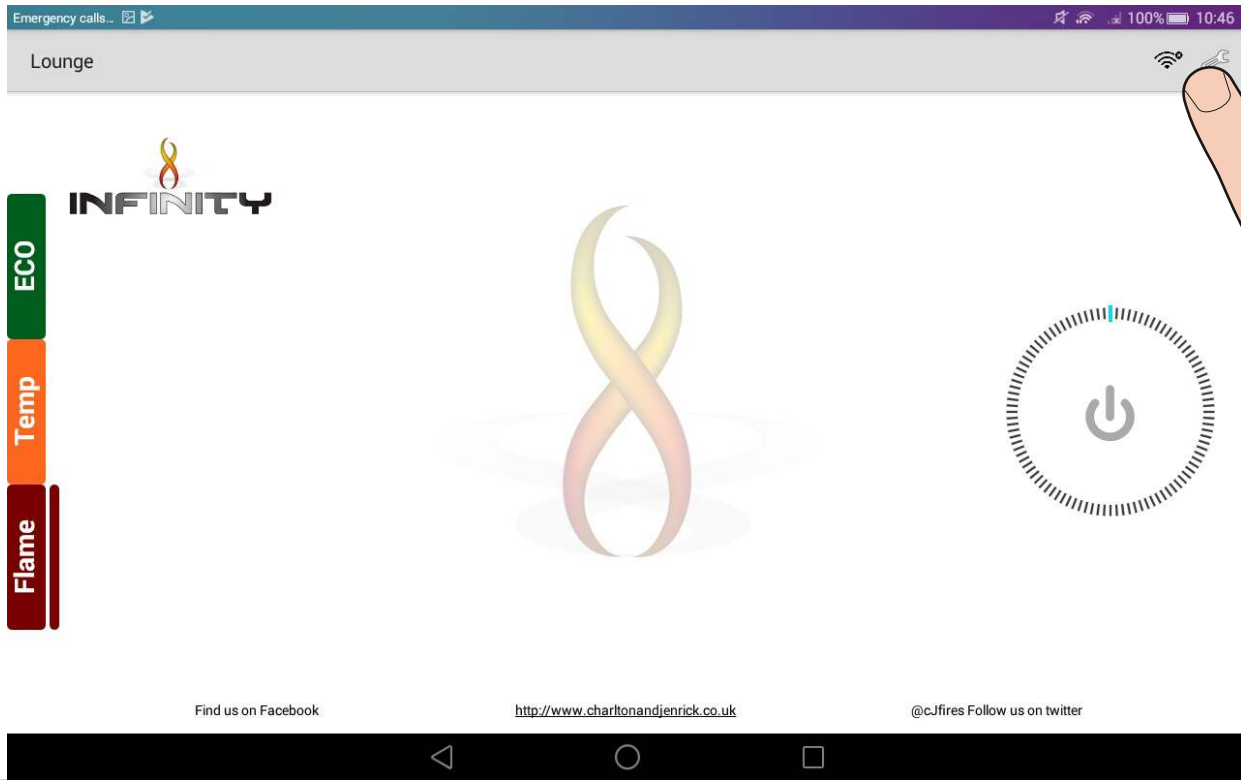

To view version information etc. or factory reset the WiFi module tap the Maintenance icon  at the top of the screen.

App version
Module version
Module wifi version

1.0
G1.06
3.3.2.6




- Reset wifi
- <http://www.charltonandjenrick.co.uk>
- Find us on Facebook
- @cJfires
Follow us on twitter
- Privacy policy
- Open-source licences


To return to the previous page tap the **BACK**  button.

App version
Module version
Module wifi version

1.0
G1.06
3.3.2.6

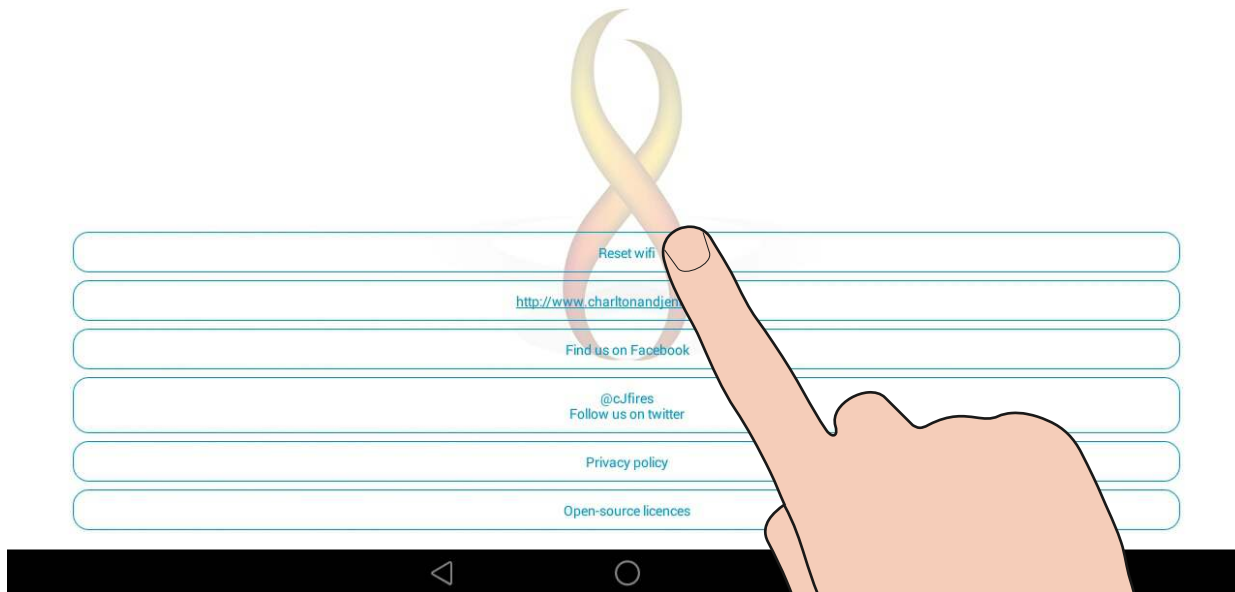

To reset the Wi-Fi module to factory default settings select **Reset Wi-Fi.**

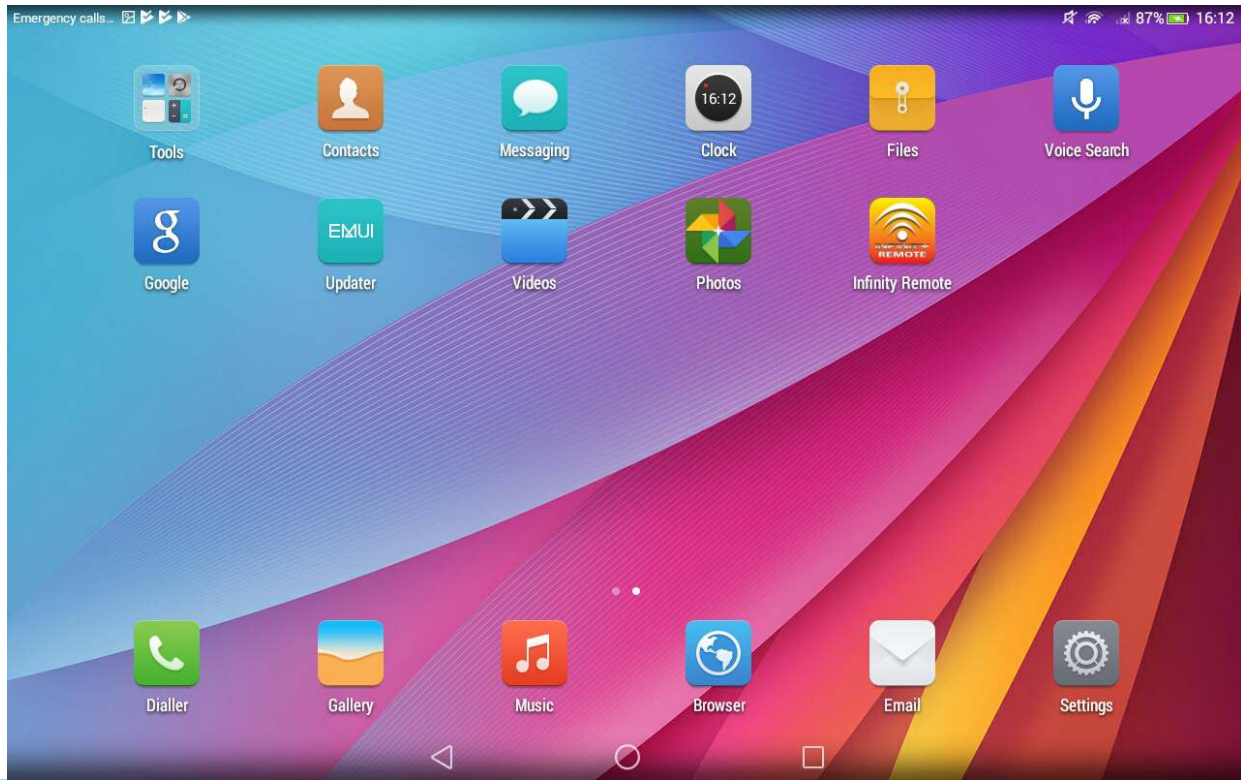

The Wi-Fi connection will be reset and the App will close.
You will now have to set up the Wi-Fi again.

Direct Connect

This method of connection can be used to control the appliance if there is no Wi-Fi Network installed in the property or in the event of a Wi-Fi Network Failure



Tap the Infinity Remote icon to start the App.

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves




INFINITY

Splash Screen
(Displayed for a few seconds)

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves



Tap to connect

Teddington
192.168.254.88

Charlton & Jenrick

Add a new fire

Select 'Add new fire'

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves



Tap to connect

Teddington
192.168.254.88

Infinity 4C55CC163CB9

Select the Infinity Fire from the list that matches your fire.
(there may be only one in the list)

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves



Connect to Infinity 4C55CC163CB9


Enter your Infinity access code

Infinity access code


Your access code is printed in the instructions

Cancel


OK

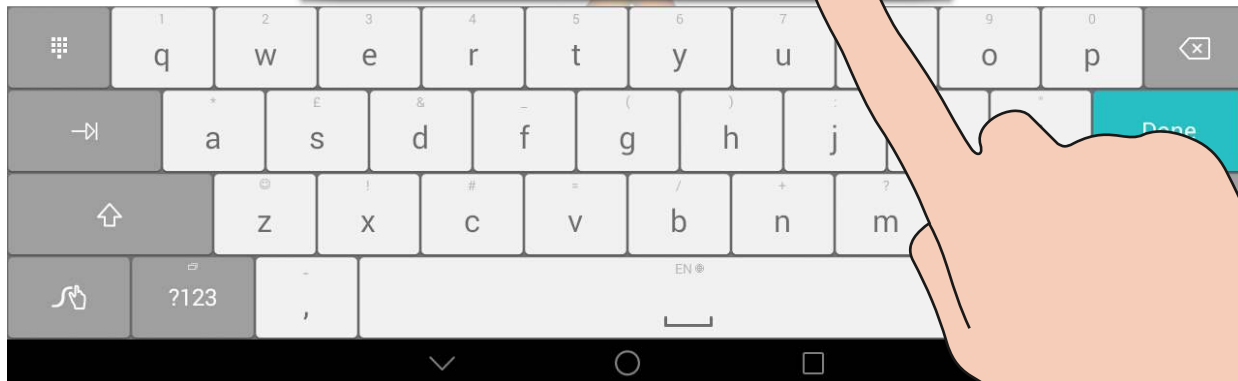

Enter the fire's access code and select **OK**
(Found on the rear of the product
card, packing box and on the Wi-Fi Unit).

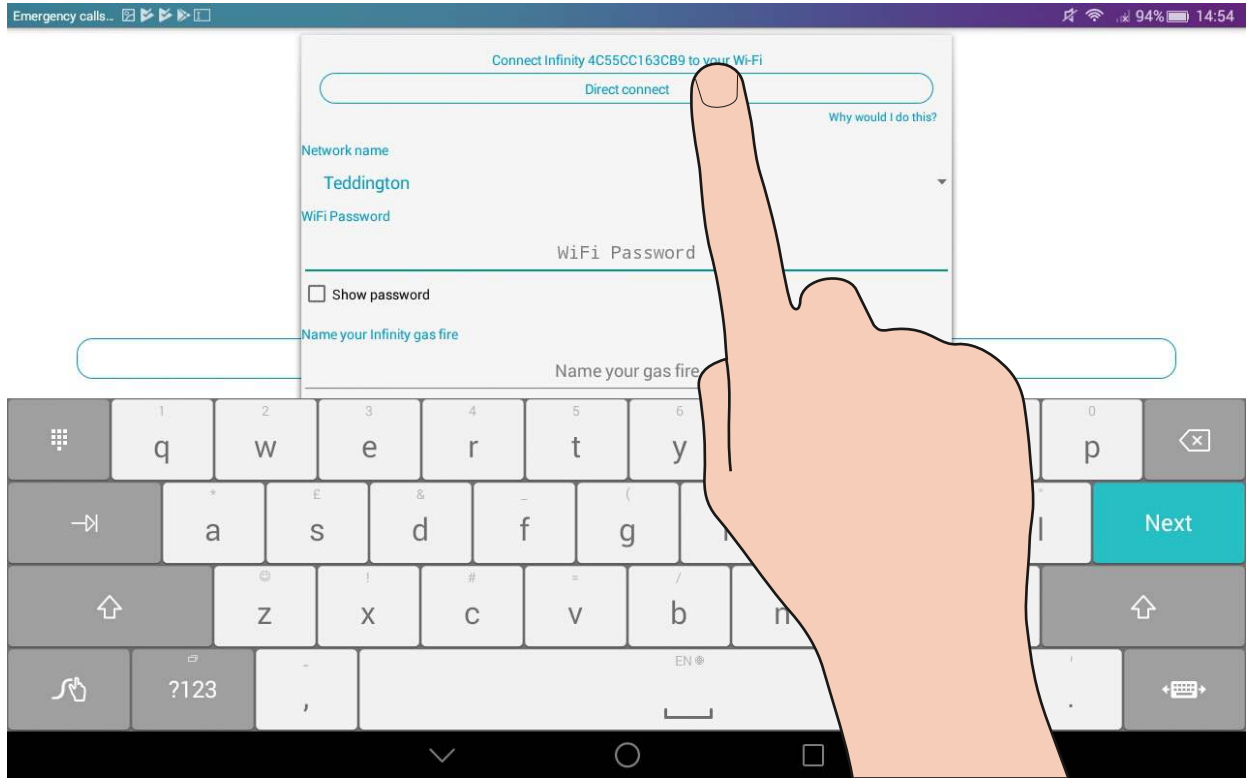

Select **Direct connect**.

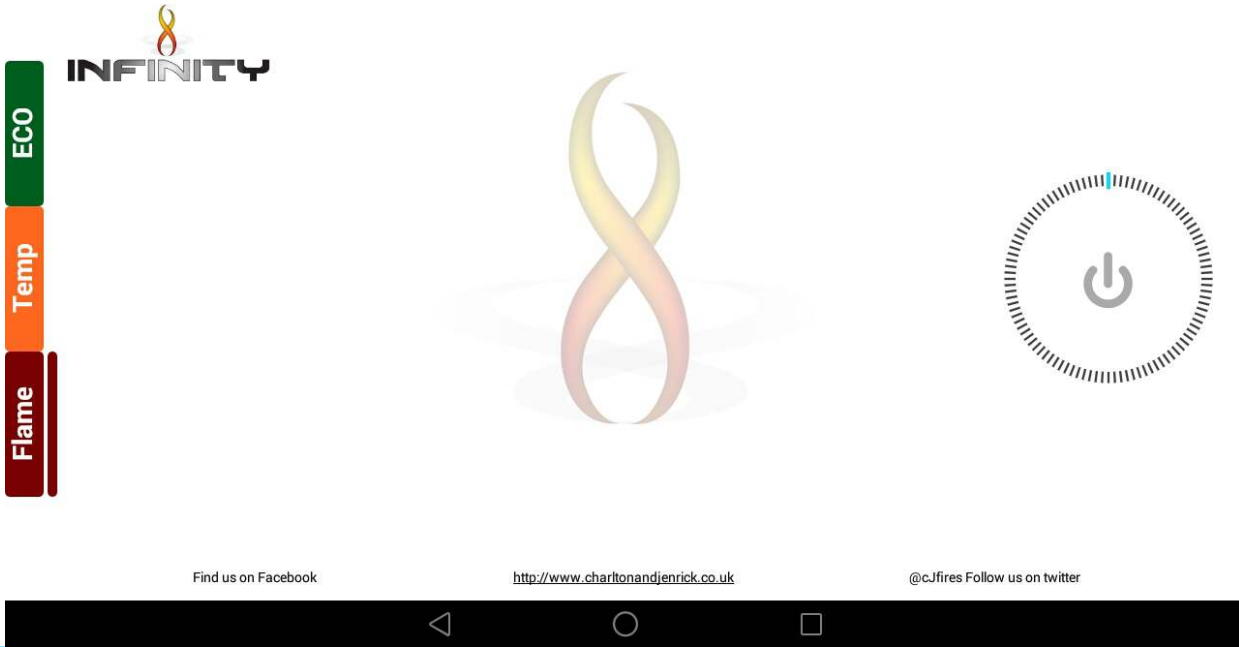

You can now control the fire as normal.

